

1 / 7


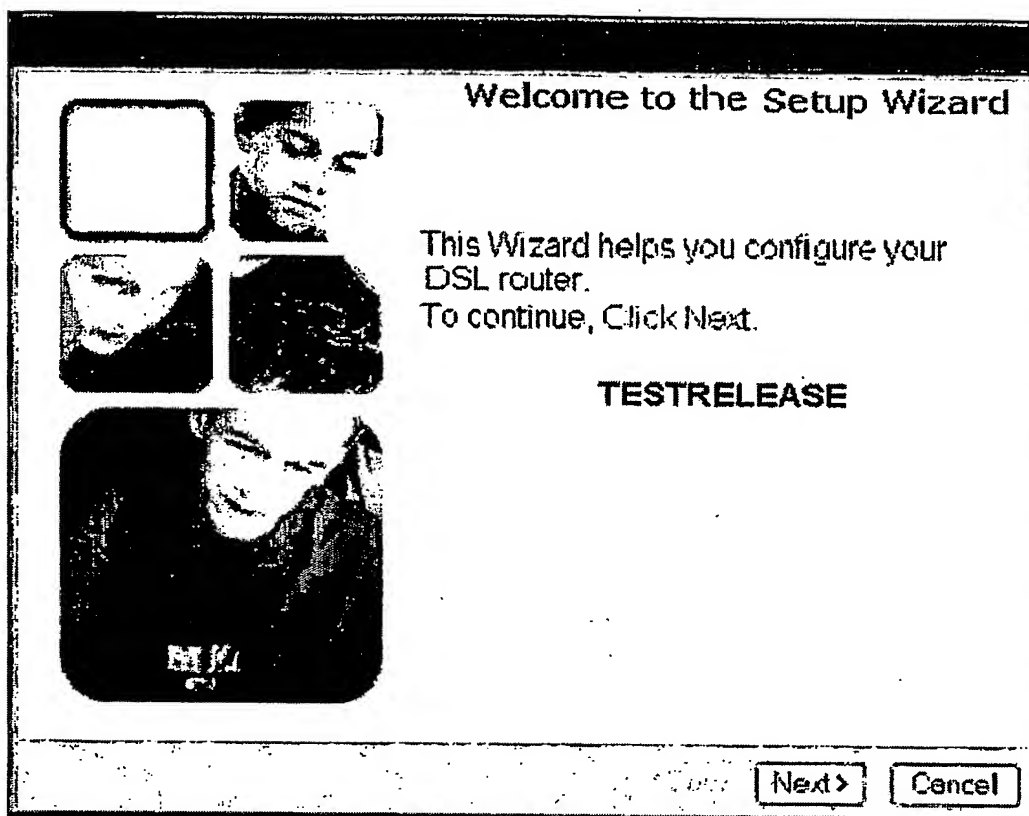


Fig. 1

BEST AVAILABLE COPY

2 / 7

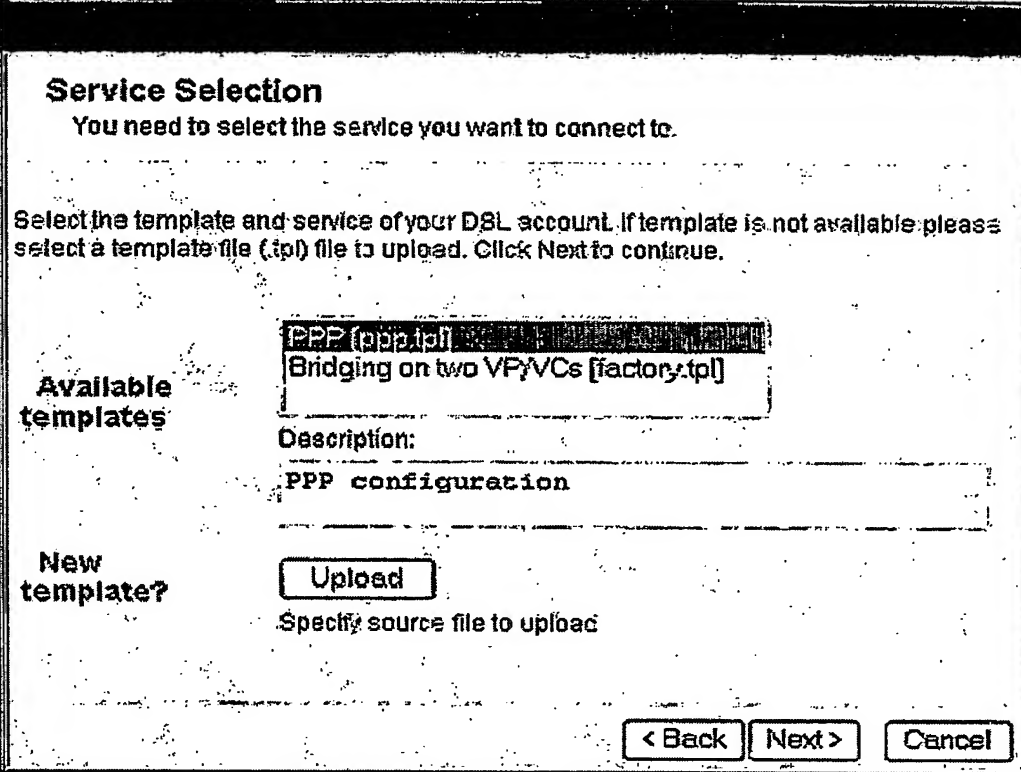

**Service Selection**

You need to select the service you want to connect to.

Select the template and service of your DSL account. If template is not available please select a template file (.tpl) file to upload. Click Next to continue.

**Available templates**

PPP (ppp.tpl)
Bridging on two VP/VCs (factory.tpl)

**Description:**

PPP configuration

**New template?**

Specify source file to upload

Fig. 2

BEST AVAILABLE COPY

3 / 7

The screenshot shows a window titled "ATM parameters" with a subtitle "ATM VPI/CI value". Below the subtitle, there is a text instruction: "Configure the VPI/CI value. This value should be provided by your ISP". A label "VPI/CI" is positioned to the left of a dropdown menu that currently displays "8\*35" with a downward arrow. Below the dropdown, the text "Select the correct VPI/CI value" is displayed. At the bottom right of the window, there are three buttons: "< Back", "Next >", and "Cancel".


Fig. 3

BEST AVAILABLE COPY

4 / 7

**Point-to-point\_protocol**  
Configure PPP parameters

Configure the PPP settings. These values should be provided by your ISP.

PPP type    
Select the PPP type.

 
Dial-In mode    
Select your preferred dial-in mode.

Fig. 4

BEST AVAILABLE COPY

5 / 7

**Start configuring**  
Review settings before configuring the DSL router

The Wizard has enough information to configure your router. If you want to review or change settings, click Back, click Next to start configuration.

Settings:

<b>Device:</b>	
Name	510
Serial #	0814LD7
<b>Device Configuration:</b>	
Region	Belgium
Provider	net
Service	PPP
Description	PPP configuration

< Back   Next >   Cancel

Fig. 5

BEST AVAILABLE COPY

6 / 7

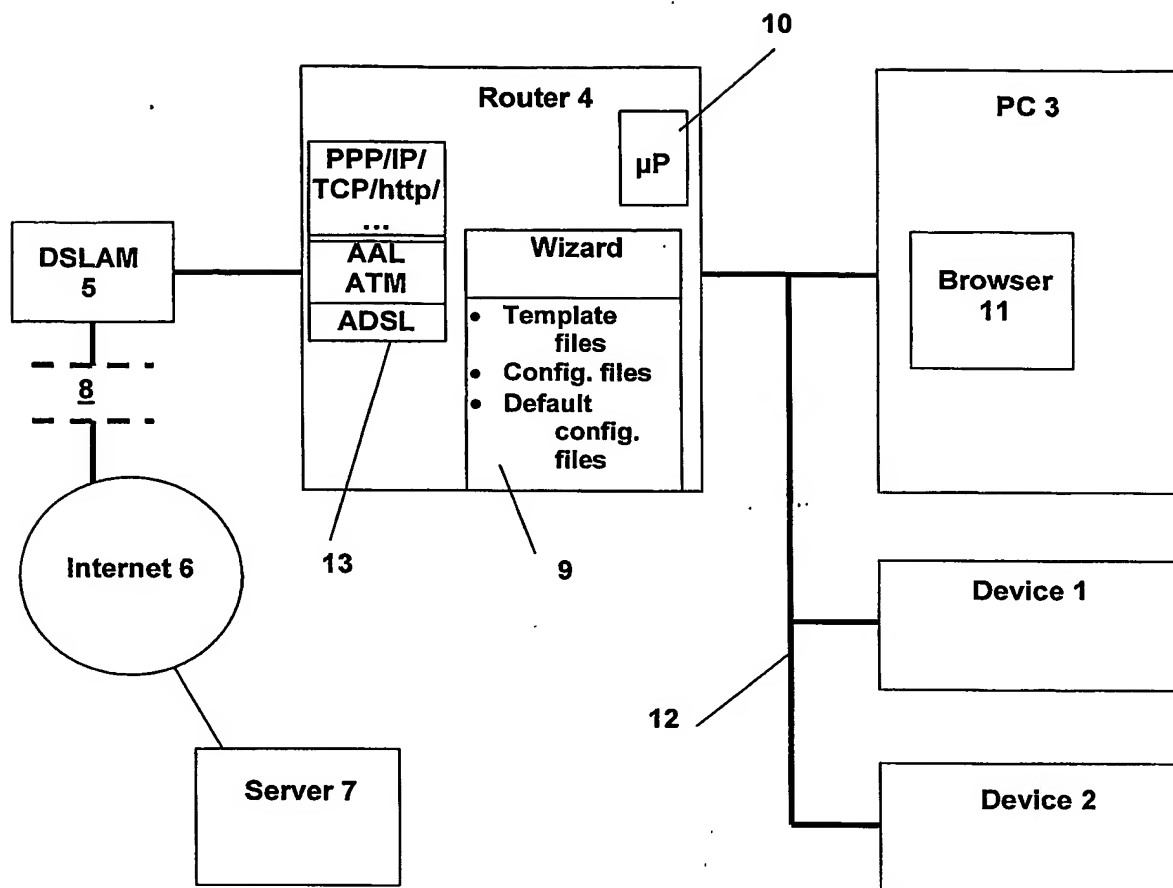
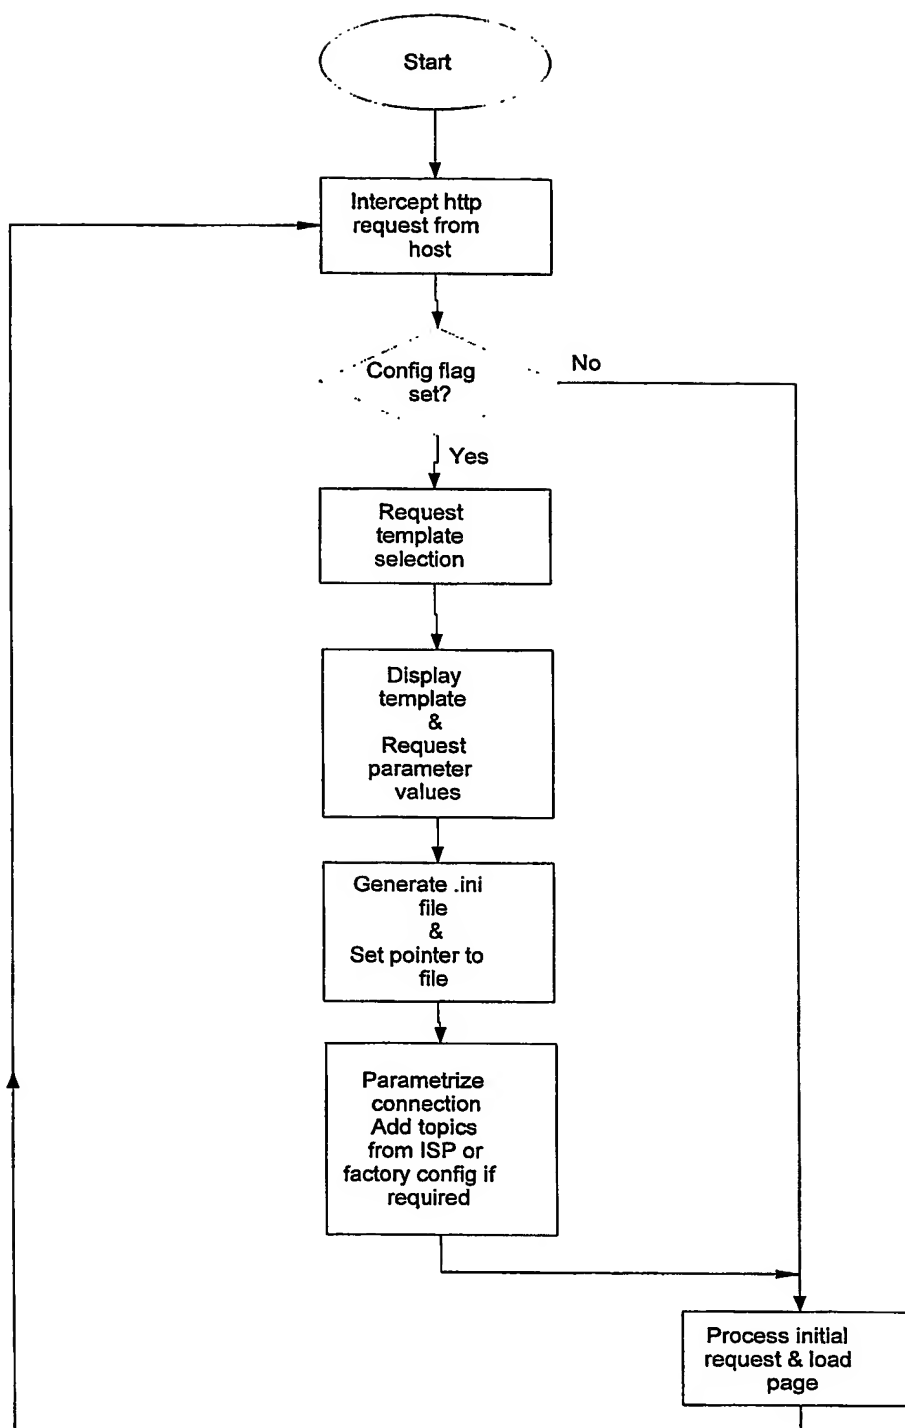


Fig. 6

7/7

**Fig. 7**

BEST AVAILABLE COPY